Do not install your tent when the car is on a slope.

Do not start the car engine while the tent is being assembled.

Do not lean against the tent or step on it, after the tent is installed.

Do not smoke inside the tent.

The straps and ground nails should not fixed when re-adjusting the car location.

It is suggested that the distance from the car rear-end to the line which crosses the nearest poles should be ≥ 1.3 m.

Please pull the handbrake when the car is parked.

The tent can only be installed when the car engine is turned off and the exhaust gas is not discharged.

Before assembling the tent, to add 2-pcs U-shape seal rubber protectors at the sharp corners of backdoor.

Car backdoor should be open before installing the tent, or when re-adjusting the car location.

Please keep the tent away from fire sources, and avoid inflammable, explosive items and equipment in the tent.

4/4









Inner tent+ tent fly



Storage bag for rods



Support rods



Fiber rods



Storage bag for nails



Nails

Tent roof



Wind ropes



Fixing band for vehicle Fixing band for tent





U-shape seal rubber protectors

1/4



Installation manual



Tent Instruction Manual Installation Instructions



- Add 2-pcs U-shape seal rubber protectors at the sharp corners of backdoor.

Step-1



- Find a flat ground and remove all sharp objects.
- Spread out the tend on the ground.

Step-2



 Prepare the fiber rods(two longer and one shorter rods).

Step-3



 
- Insert the two longer rods through holes ①.
- Insert the shorter rod through hole $\ensuremath{\mathfrak{D}}$.
- Insert the nails that are already fastened on each corner of the tent into the end of the rods (3) while propping up the tent

Step-4



Installation Instructions

Tent Instruction Manual



- Tighten the bottom of the tent with ground nails.
- Attach the inner tent inside the outer one using the hoops and the buttons.

Step-5



- Use 2 rods to support the entrance door and fix the ground nails.

Step-6



- Drive the car backward to get it closer to the tent.
- Use the straps to fix the tent to the car at various fixing points, such as wheel caps, door handles, roof bars ...

Step-7



- Add the small roof over the airvent and fasten the hooks.
- Tighten the tent with the windproof ropes and the ground nails.

Step-8