 
 


AUSTRAL



AUSTRAL



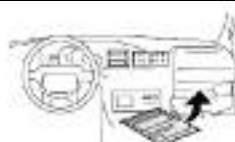
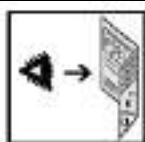
ESPACE



Rafale

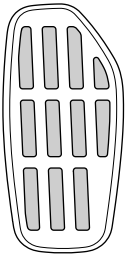
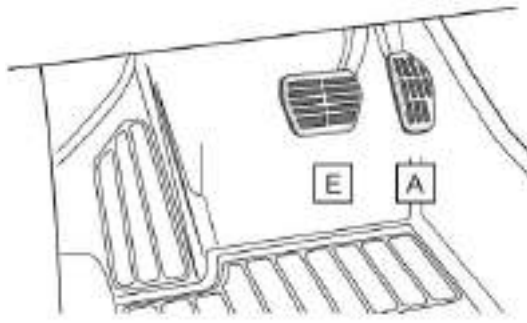


46 53 187 79R

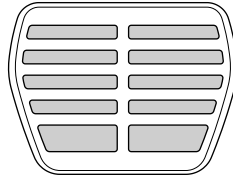


FRA Instructions de montage
CES Pokyny pro montáž
DNK Monteringsveiledning
DEU Einbauanleitung
ENG Installation instructions
SPA Instrucciones de montaje
EST Paigaldusjuhised
FIN Asennusohje
ELL Οδηγίες συναρμολόγησης
HRV Návod k montáži
HUN Beépítési utasítások
ITA Istruzioni per il montaggio
JPN 取付説明書

KOR 조립설명서
LIT Montavimo instrukcija
LAV Montāžas instrukcijas
NLD Inbouwhandleiding
NOR Monteringsveiledning
POL Instrukcja wbudowania
POR Instruções de montagem
RON Instrucțiuni de montaj
RUS Инструкция по монтажу
SLK Návod na zabudovanie
SLV Navodila za inštalacijo
SWE Montageanvisning
TUR Montaj talimatları



A

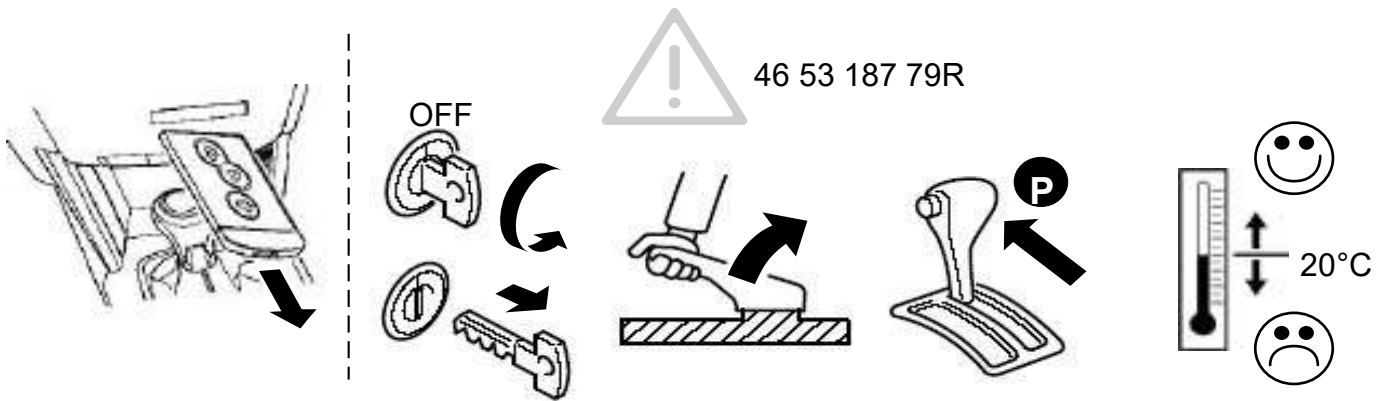


 
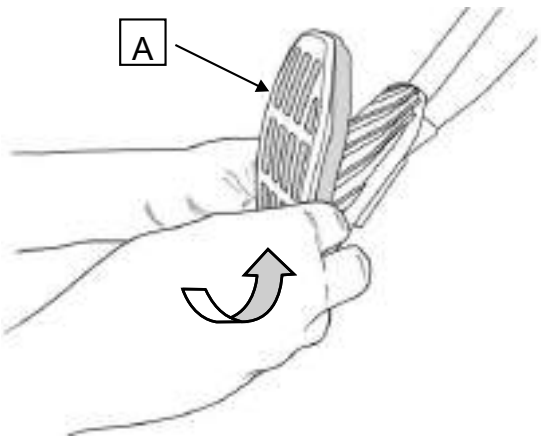
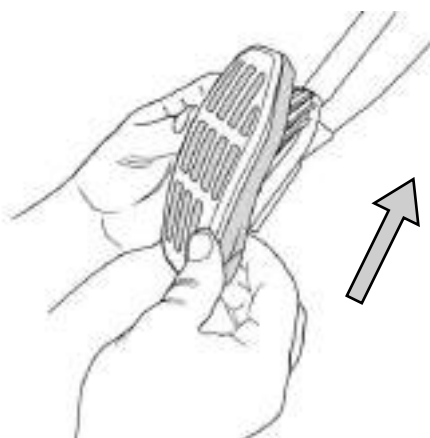
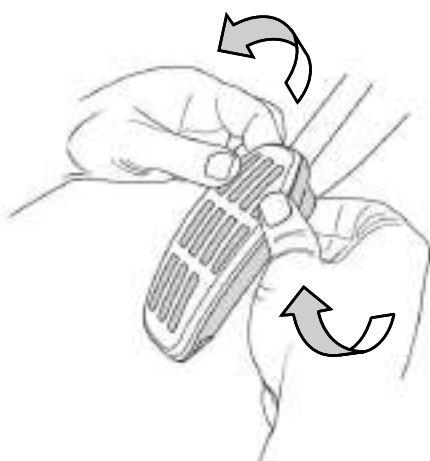
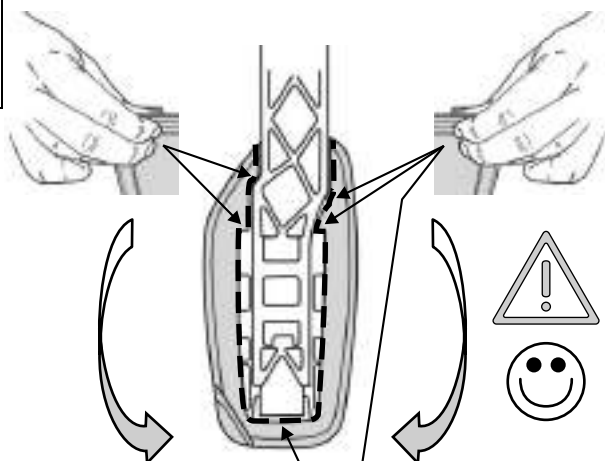
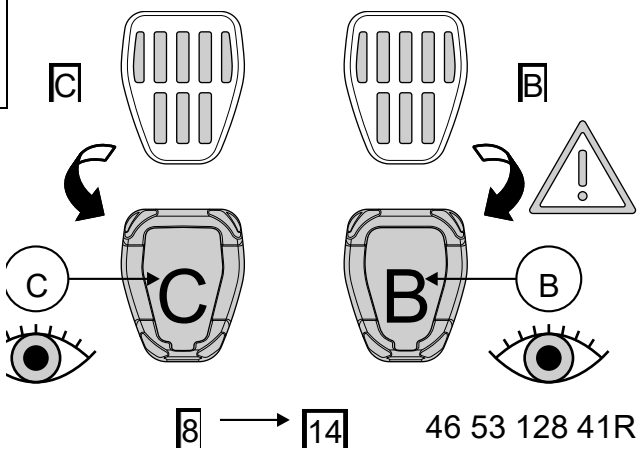
E

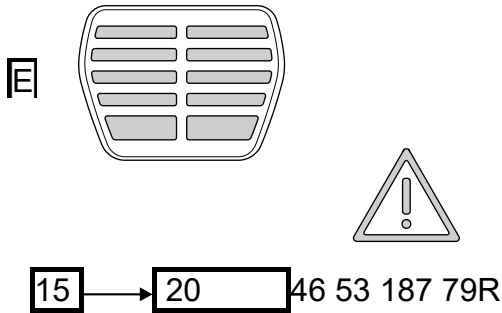
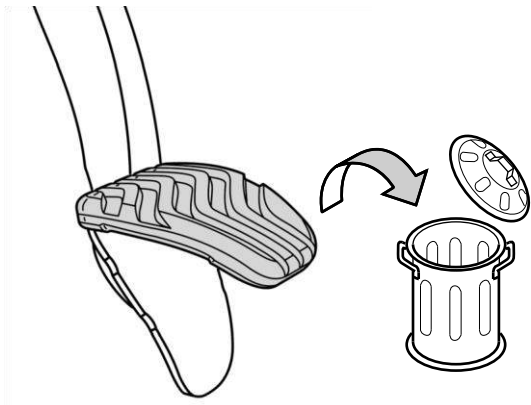
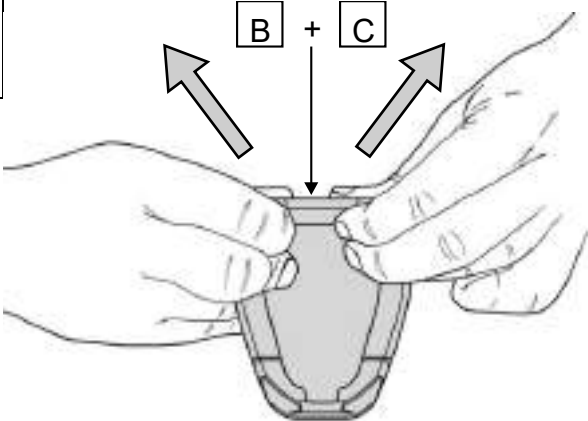
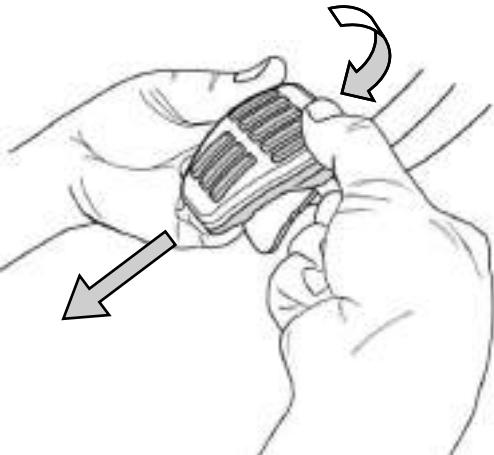
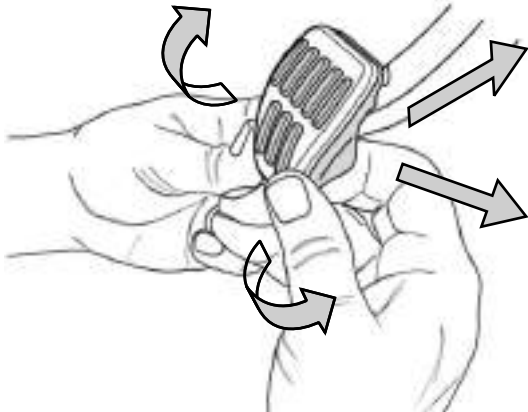
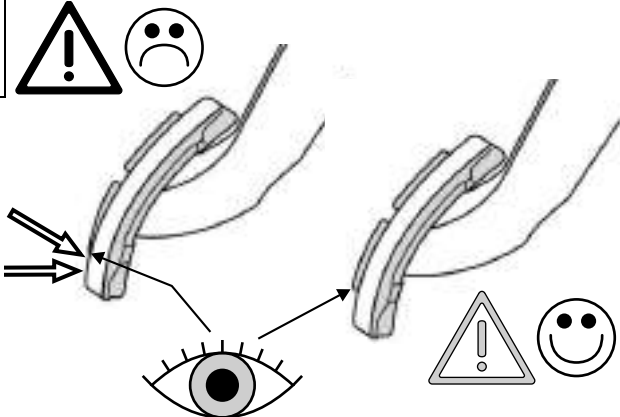


D

46 53 187 79R



1	 A	2	
3		4	
5		6	 8 → 14 46 53 128 41R

7	 15 → 20 46 53 187 79R
8	
9	
10	
11	
12	

13	14
15	16
17	18
19	20
46 53 187 79R Confidential C	/ --B 16 / 12 / 2023 5 / 9