
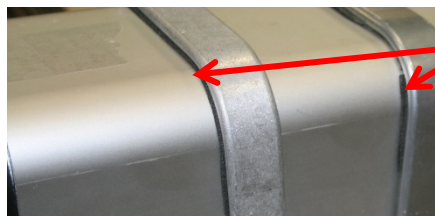


## HALR-X-35

### Installation of the conduit carrier (tube) on non PDE crossbars – up to 35 mm wide -

Install the conduit carrier on the crossbars as shown in the example picture below.

The conduit carrier has to be installed with at least 2 hooks on the front crossbar and 2 hooks on the rear crossbar of the vehicle.

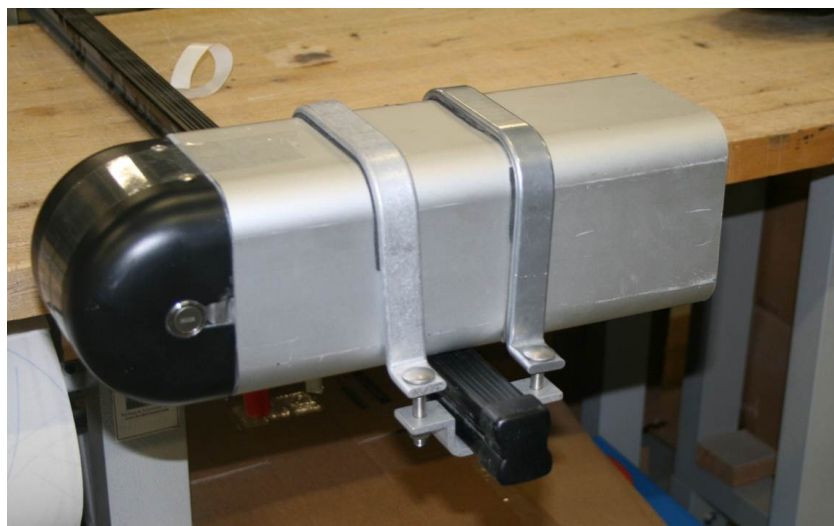

Before installing the hooks,  
apply the protective tape  
(3) on the inside of each  
hook ,

Note:  
Apply anti-seize compound on all bolts.

1. Hook ( 4 x ) not part of this set

Content of 1 set:

2. Bolts /nuts / washers ( 8x )
3. Protective foam ( 4x )
4. U-shape retainer ( 4x )
5. Anti-seize compound(1 x )

