


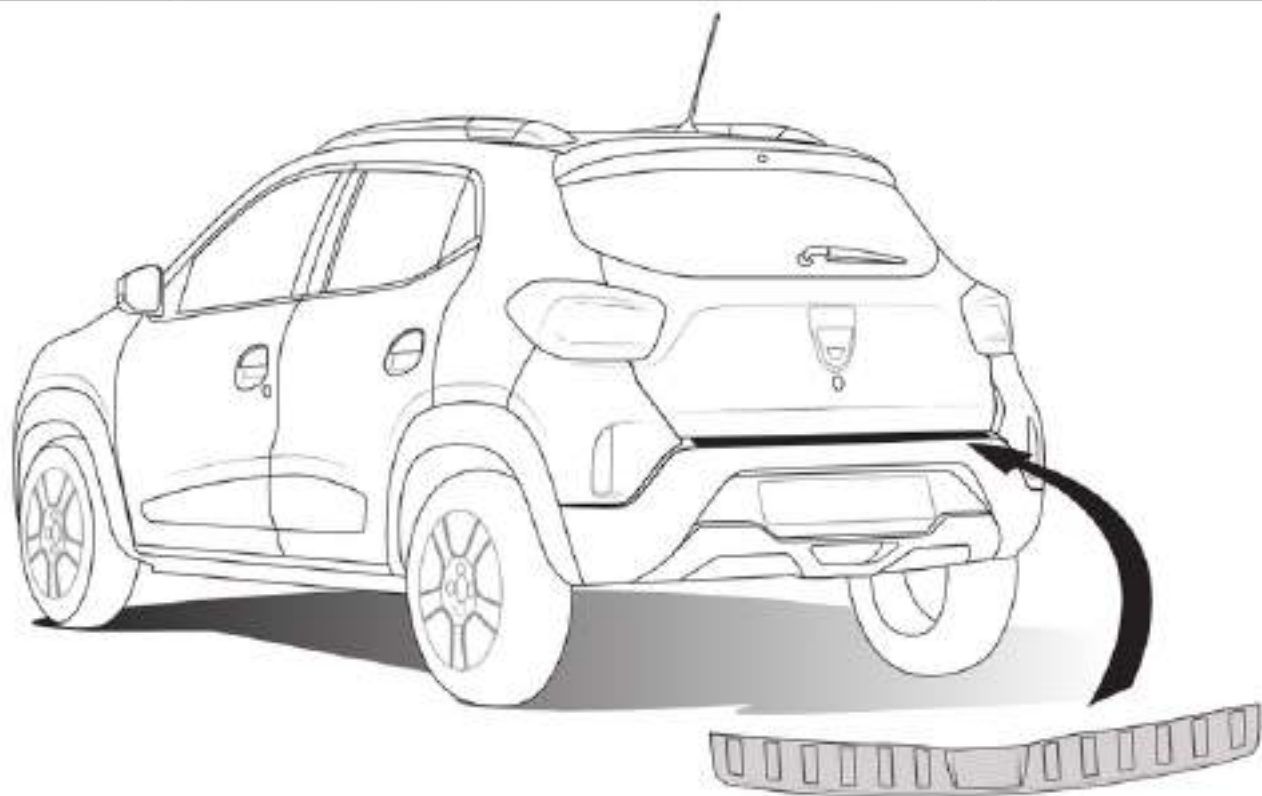


# SPRING



<http://tech-accessoires.renault.com>

**8201741960**

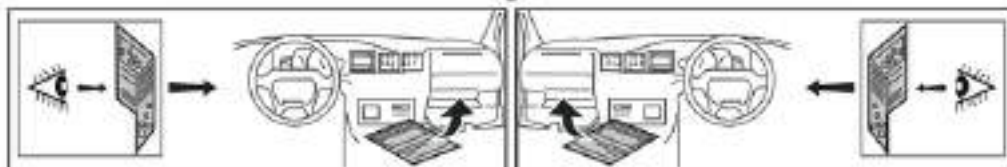

**FRA** Instructions de montage  
**CZA** Pokyny pro montáž  
**DAN** Monteringsveiledning  
**DEU** Einbauanleitung  
**ENG** Installation instructions  
**ESP** Instrucciones de montaje  
**EST** Paigaldusjuhised  
**FIN** Asennusohje  
**GRK** Οδηγίες συναρμολόγησης  
**CRO** Návod k montáži  
**HUN** Beépítési utasítások  
**ITA** Istruzioni per il montaggio  
**JPN**

**KOR**  
**TH** Montavimo instrukcija  
**LET** Montāžas instrukcijas  
**NLD** Inbouwhandleiding  
**NOR** Monteringsveiledning  
**PLK** Instrukcje wbudowania  
**PTG** Instruções de montagem  
**ROM** Instrucțiuni de montaj  
**RUS** Инструкция по монтажу

**V** Navodila za inštalacijo  
**SWE** Montageanvisning  
**TRK** Montaj talimatları

8201741960

09 / 03 / 2021



1/10



A



B

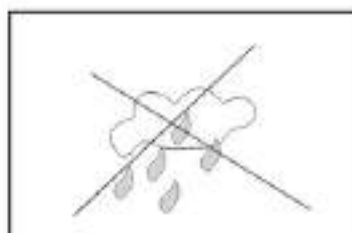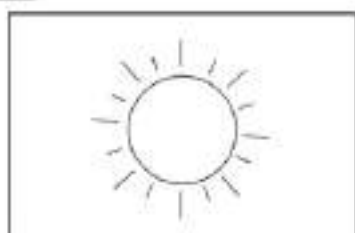

18 < ... < 35 C




77 11 170 408



77 11 430 343



Primer

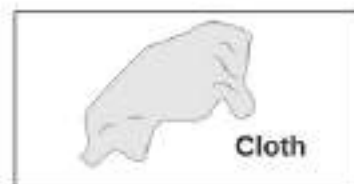

Cloth

1

